

# Mott Porous Metal Data Sheet

**Media Grade:** 0.5  
**Type:** Iso Pressed Tube  
**Alloy:** 316LSS  
**Inside Diameter:** 0.375 inches  
**Outside Diameter:** 0.500 inches

**Issued:** 06/25/10

### Manufacturing Specifications


Bubble Point, inch of Hg 3.0 - 3.9  
 Minimum Tensile, kpsi 18.9  
 Yield Strength, kpsi 17.1  
 Young's Modulus, x 10<sup>6</sup> psi 8.3

### Permeability Coefficient

Liquid, K<sub>L</sub> 20  
 Gas, K<sub>G</sub> 154  
*Liquid: Pressure Drop, psid =*  
*(K<sub>L</sub>)(Flux, gpm/ft<sup>2</sup>)(Visc, cp)(Thck, inch)*  
*Gas: Pressure Drop, psid =*  
*(K<sub>G</sub>)(Flux, acfm/ft<sup>2</sup>)(Visc, cp)(Thck, inch)*


### Particle Removal Efficiency

**Liquid Efficiency** Testing per ASTM F795  
 Tested at 1 gpm/ft<sup>2</sup>  
 90% at 0.9 μm  
 99% at 1.6 μm  
 99.9% at 2 μm  
  
**Air Efficiency** Tested at flux of 6 acfm/ft<sup>2</sup>  
 >90% for all particle sizes  
 >99% for all particle sizes  
 99.9% at 0.25 μm

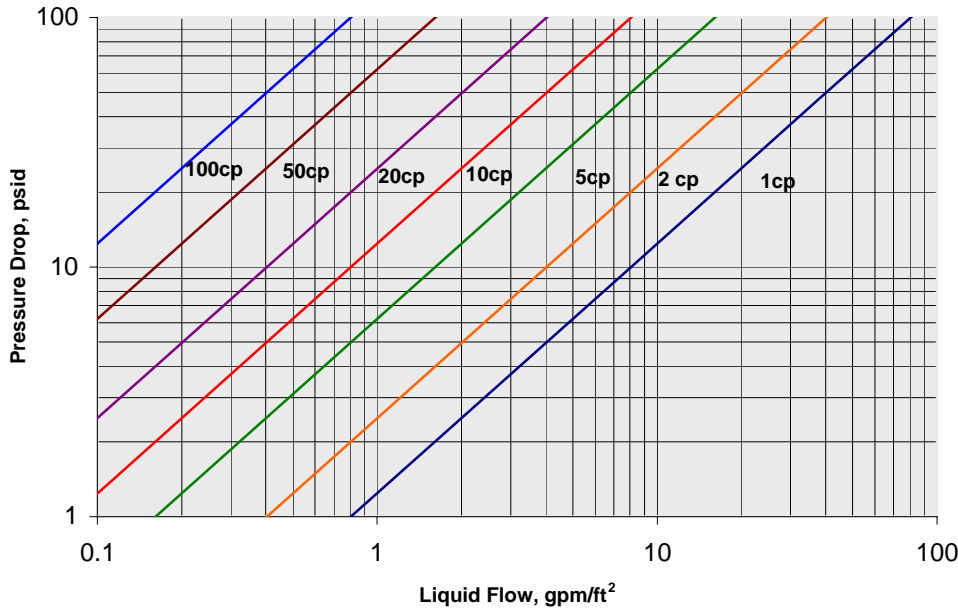

**Notes:**

- 1 - Tests run at 70 °F
- 2 - Tests run with water, other curves generated using Liquid Formula

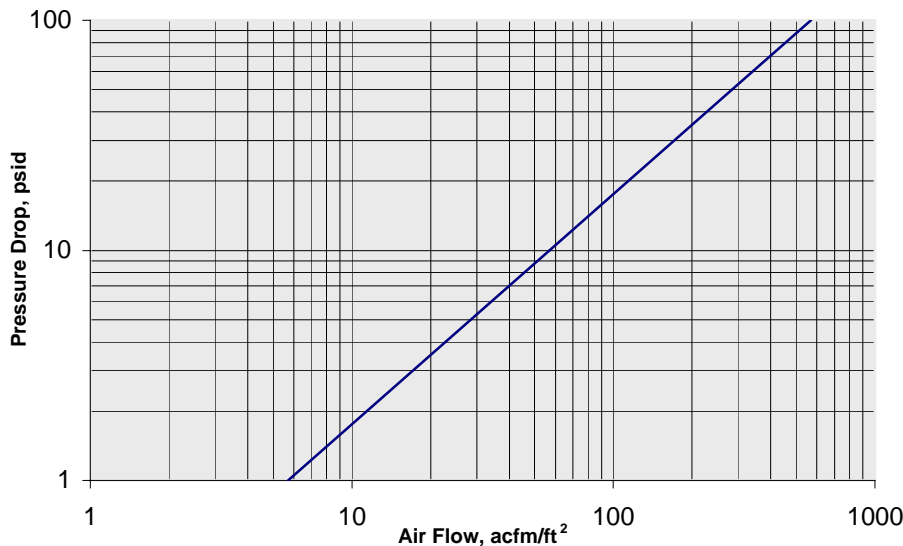

**Notes:**

- 1 - Tests run with air at 70 °F

**mott corporation**

84 Spring Lane, Farmington, CT 06032-3159  
 860-747-6333 Fax 860-747-6739  
 www.mottcorp.com

*Flow Characteristics on these data sheets are typical and should be used for general reference only.*