

# Mott Porous Metal Data Sheet

**Media Grade:** 100.0  
**Type:** Iso Pressed Tube  
**Alloy:** 316LSS  
**Inside Diameter:** 0.375 inches  
**Outside Diameter:** 0.500 inches

**Issued:** 10/10/00  
**Revision:** 0

### Manufacturing Specifications


Bubble Point, in H<sub>2</sub>O 0.5 - 1.5

### Permeability Coefficient

Liquid,  $K_L^*$  0.2  
 Gas,  $K_G^{**}$  3


**Liquid: Pressure Drop, psid =**  
 $(K_L^*)(\text{Flux, gpm/ft}^2)(\text{Visc, cp})(\text{Thck, in.})$

**Gas: Pressure Drop, psid =**  
 $(K_G^{**})(\text{Flux, acfm/ft}^2)(\text{Visc, cp})(\text{Thck, in.})$

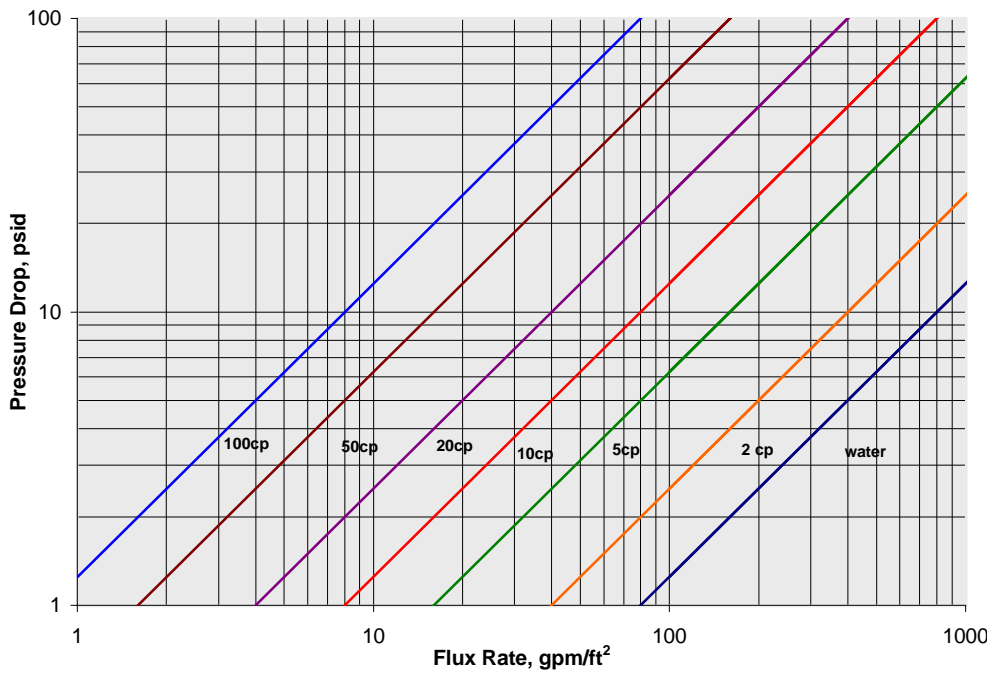

#### Notes:

- 1 - Tests run at 70 °F
- 2 - Tests run with water, other curves generated using Liquid Formula

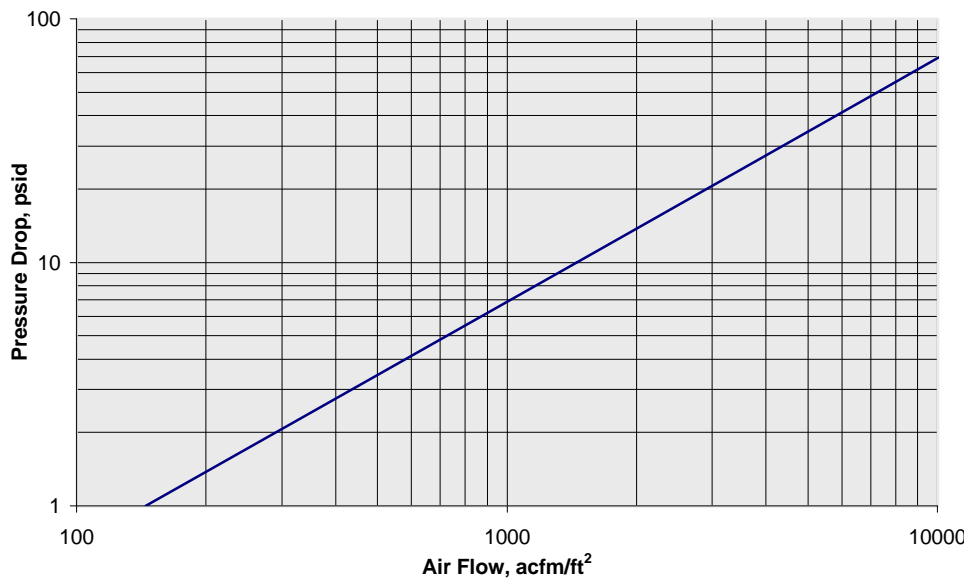

#### Notes:

- 1 - Tests run at 70 °F

**mott corporation**  
*Think of the possibilities*

84 Spring Lane, Farmington, CT 06032-3159  
 860-747-6333 Fax 860-747-6739  
[www.mottcorp.com](http://www.mottcorp.com)